

Installation guide


018R9670

Solenoid coil


Type BB, BG, BQ, BT, BU, BY and BN




018R9670

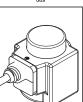


IP00/PD3 Spade

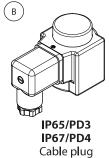




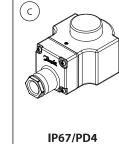


IP67/PD4 Terminal box

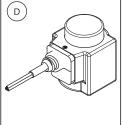


IP67/PD4 Moulded cable

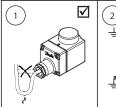

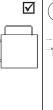



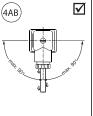




Type of control	1				
Class of protection	Class I				
Ambient temperature	See T _{ambient} on coil				
Voltage variation	For voltage variation, see print on coil				
Voltage tolerances	For voltage tolerances see datasheet, when ordering the coil				
Humidity	Only none-conductive pollution occurs except that occasionally a temporary conductivity caused by				
	condensation is to be expected.				
Ball pressure test	200 °C (392 °F)				
Impulse withstand voltage	Terminal box 4.0 kV at altitude <4000 m (13123 ft)				
	Cable		4.0 kV at altitude <4000 m (13123 ft)		
	Spade	4.0 kV at altitude <4000 m (13123 ft)			
	Plug		4.0 kV at altitude <2000 m (6561 ft)		
_	3.1 kV 2000 m <altitude<4000 (6561<altitude<13123="" ft)<="" m="" td=""></altitude<4000>				
Overvoltage category	III				
Degree of protection IPXX Pollution degree PDX	Enclosure rating according to IEC standard 60529 Pollution degree according to EN60664-1		IP67 plug	PD4	
			IP65 plug		
			IP20 protection cap	PD3	
			IP00 spade		
Installation	Integrated control (picture A - D)				
	Incorporated control (picture A - D)				
	Independently mounted control (IP65 and IP67) (picture B - D)				
Suitable cable and	ø6.6 – ø11 mm (ø0.26 – ø0.43 in)				
	0.75 – 1.5 mm² (21 – 15 AWG flexible cord)				
Suitable cable for cable plug	See datasheet when ordering the coil				
Moulded cable size	Ø6.6 mm (Ø0.26 in)				
Cable conductor size	3 x 0.75 mm ² (3 x 0.001 in2)				
Moulded cable	The supply cord of this control cannot be replaced, if the cord is damaged. The control should be discard-				
	ed				
Plugs can be removed/mounted					
Surface temperature	Indenpendantly mounted controls should be sealed of if the coil temperature exceed higher than 85°C				

- Only qualified personnel is allowed to install or maintain this product Disconnect the power when dismounting the coil
- Імпортер:ТОВ з іі "Данфосс ТОВ" 04080, Київ 80, п/с 168, Україна

 - Avoid direct exposure to alkaline conditions, use in neutral conditions is recommended
 If the coil is used as independently mounted control, the end-user shall use a plastic cable gland with strain relief
 Technical specifications are according to EN60730-1

Danfoss

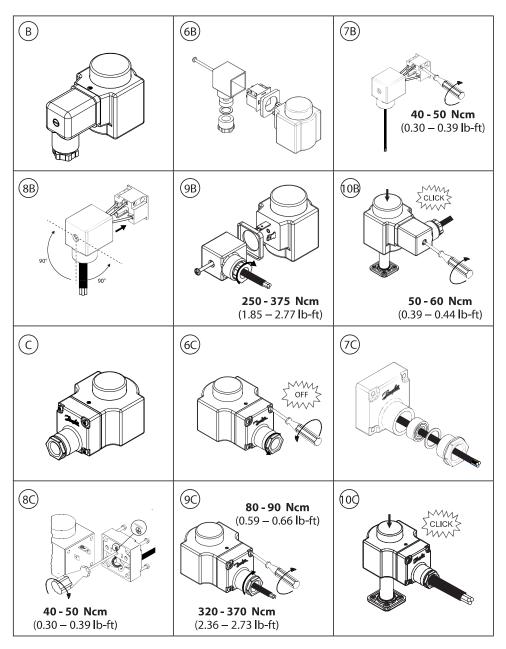

Visit <u>www.products.danfoss.com</u> for further technical data Para más información, visite <u>www.products.danfoss.es</u> Rendez-vous sur le site <u>www.products.danfoss.fr</u> pour plus de données techniques