



WIRING DIAGRAMS


Electrical connections must be made by qualified and skilled personnel in conformity with the local regulations in force.

A cable with 6 pole socket is included in the burner equipment.



Burner control box

▶ "ONE STAGE" OPERATION

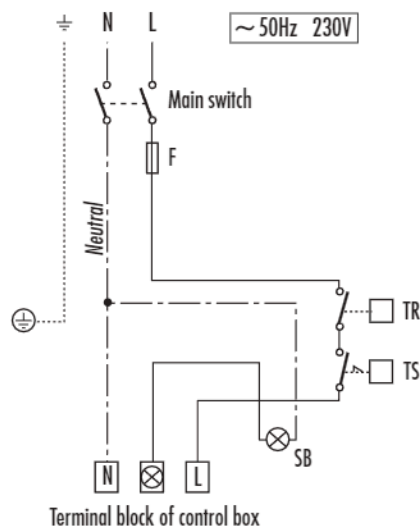

TR - Regulating thermostat
TS - Safety thermostat (with manual resetting)
SB - Remote lock-out lamp (230V 0,5A max)
F - Fuse

The following table shows the supply lead sections and types of fuse to be used.

Model	▼ RC2-26R	▼ RC2-38R	▼ RC2-46R	▼ RC2.1-46R
	230V	230V	230V	230V
F A	T6	T6	T6	T6
L mm ²	1	1	1	1

F = Fuse L = Lead section