



ACVATIX™

Electromotive actuators for SQV..P.. PICVs

For PICVs (pressure independent combi valves) VPF43.., VPF44.. and VPF53..

- **SQV91.. Operating voltage AC/DC 24 V,
Positioning signal 3-position, DC 0-10 V, DC 4-20 mA**
- **Position feedback and selection of flow characteristic**
- **Manual adjuster, position and status indication (LED)**
- **Selectable positioning times 40-240 seconds**
- **Fail-safe function (PICV open/closed)**
- **Selection of acting direction**
- **Optional functional extension: Auxiliary switch, potentiometer, and AC 230 V module**
- **Direct mounting on PICVs**
- **UL Listed**

Use

Electromotive actuators to operate Siemens PICVs for type series VPF43.., VPF44.. and VPF53.. with 20/40/43 mm stroke, as control valves for ventilation, air conditioning, district heating and refrigeration plants.

Type summary

| Type | Stock No. | Stroke | Pos. force | Operating voltage | Positioning signal | Spring return time | Pos. time ²⁾ | | Fail-safe function |
|-----------------|-------------|-------------|------------|--------------------------------------|---|--------------------|-------------------------|-------|--------------------|
| | | | | | | | 20mm | 40mm | |
| SQV91P30 | S55150-A130 | 20/40/43 mm | 1100 N | AC/DC 24 V AC 230 V ¹⁾ | 3-position DC 0...10 V DC 4...20 mA | 30 sec | 40 sec | 80 s | Stem retracts |
| SQV91P40 | S55150-A131 | | | | | | 60 sec | 120 s | |
| | | | | | | | 90 sec | 180 s | Stem extends |
| | | | | | | | 120 sec | 240 s | |

¹⁾ AC 230 V requires accessory ASP1.1.

²⁾ The positioning time can be selected using the DIL switch, see page 7.

Electrical accessories

| Type | Auxiliary switch pair ASC10.42 | Potentiometer ASZ7.6/1000 | AC 230 V module ASP1.1 |
|-----------------|-----------------------------------|------------------------------|---------------------------|
| Stock number | S55845-Z137 | S55845-Z136 | S55845-Z138 |
| | Max. 2 | | |
| SQV91P30 | Max. 1 | | Max. 1 |
| SQV91P40 | Max. 1 | | Max. 1 |

Spare parts, rev. number

No spare parts available.
Revision numbers, see page 14.

Ordering


Example

| Type | Stock number | Designation | Quantity |
|-------------|--------------|---------------|----------|
| SQV91P40 | S55150-A131 | Actuator | 1 |
| ASZ7.6/1000 | S55845-Z136 | Potentiometer | 1 |

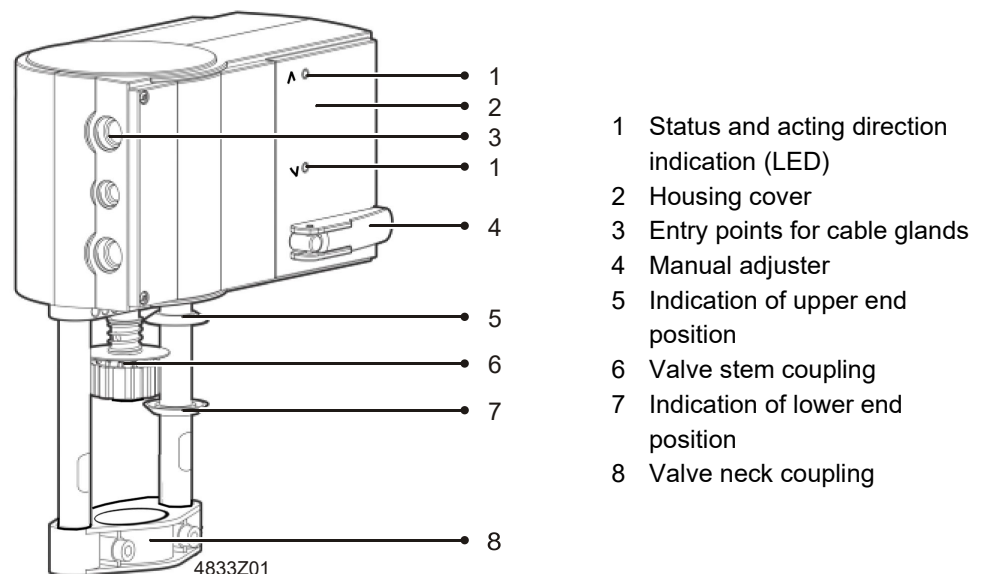
Delivery

Actuator, PICV, and accessories are individually packed for delivery.

Equipment combination

| Valve type | DN | PN class | Flow V_{100} [m ³ /h] | Data sheet | |
|--|--------|----------|---------------------------------------|------------|-------------|
|  PICVs | | | | | |
| VPF43.. | Flange | 50 | 16 | 2,3...25 | N4315 |
| | | 65 | | 4,4...35 | |
| | | 80 | | 5,3...43 | |
| | | 100 | | 12,1...90 | |
| | | 125 | | 18,5...135 | |
| | | 150 | | 25,6...195 | |
| | | 200 | | 95...280 | |
| VPF44.. | Flange | 50 | 16 | 2,9...26,2 | A6V11466366 |
| | | 65 | | 4...35,8 | |
| | | 80 | | 5,5...47,9 | |
| VPF53.. | Flange | 50 | 25 | 2,3...25 | N4316 |
| | | 65 | | 4,4...35 | |
| | | 80 | | 5,3...43 | |
| | | 100 | | 12,1...90 | |
| | | 125 | | 18,5...135 | |
| | | 150 | | 25,6...195 | |
| | | 200 | | 95...280 | |

Technology/Mechanical design



The actuator can be operated as a 3-position or modulating actuator in two acting directions depending on the type of connection. It is suitable for both PICVs VPF.. with 20 mm stroke as well as for valves with a 40 mm and 43 mm stroke. The stroke is calibrated automatically during initialization.

The actuator includes a position feedback.

The actuator travels to the end position in the event of power loss, see "Fail-safe function", page 5. Up to 45 seconds pass until the actuator is available again following a restart or start after the fail-safe function is triggered.

The positioning time (40 to 240 seconds) and the flow characteristic (lin/log) can be set via the DIL switches.

| | |
|---|--|
| Auto mode | The manual adjuster is disengaged. |
| Manual mode | <p>The manual adjuster allows for manually setting the position. The motor is switched off when the manual adjuster is engaged. The fail-safe function (spring return) is reactivated after the manual adjuster is disengaged, and the actuator travels again to the set position without calibration.</p> <p>The actuator remains in this position without active operating voltage for as long as the manual adjuster is engaged.</p> |
| Initialization, automatic coupling, calibration | The actuator independently calibrates itself for each type of connection. Initialization occurs as soon as operating voltage is supplied for the first time and the waiting period ends. The actuator travels to the lower stop of the PICV, thus enabling automatic coupling with the valve stem. It then travels to the upper stop, records and stores it. Recalibration can be manually triggered any time, see "Recalibration", page 5. |
| 3-position control signal | <p>The PICV can travel to any position by supplying voltage to terminal G1 or G2 as well as L1¹⁾ or L2¹⁾.</p> <ul style="list-style-type: none"> • Voltage on G2, L2: Actuator stem retracts, PICV opens. • Voltage on G1, L1: Actuator stem extends, PICV closes. • No voltage on G1 and G2: Actuator stem stays at the applicable position. |
| | ¹⁾ When using the AC 230 V module ASP1.1. |
| Changeover of acting direction | The acting direction of the stroke direction can be reversed by exchanging connections G1 and G2 or L1 and L2. |
| Direct acting | Positioning signal OPEN on G2, L2. Positioning signal CLOSED on G1, L1. |
| Reverse acting | Positioning signal OPEN on G1, L1. Positioning signal CLOSED on G2, L2. |
| Notes | <ul style="list-style-type: none"> • Do not use connection Yu (DC 0-10 V) and Yi (DC 4-20 mA). • Positioning times can be selected, see "Positioning times", page 7. • Valve characteristic curves "lin" or "log" cannot be selected. • Position feedback U is activated after initialization/calibration. <p>Electronic motor shutdown is triggered in the end positions (valve stop or upon reaching maximum stroke) or by overload (no end switch).</p> |
| Positioning signals Yu and Yi DC 0-10 V (Yu) DC4-20 mA (Yi) | The PICV can be driven to any position by connecting a continuous positioning signal Yu or Yi. The acting direction can be reserved (direct/reverse acting) by connecting operating voltage to G1 or G2: |
| Direct acting | <p>Operating voltage AC/DC 24 V on G1 or AC 230 V on L1</p> <ul style="list-style-type: none"> • Pos. signal to Yu, Yi increasing: Actuator stem retracts, PICV opens. • Pos. signal to Yu, Yi decreasing: Actuator stem extends, PICV closes. • Pos. signal to Yu, Yi continuous: Actuator stem remains in the respective pos. |
| Reverse acting | <p>Operating voltage AC/DC 24 V on G2 or AC 230 V on L2</p> <ul style="list-style-type: none"> • Pos. signal to Yu, Yi increasing: Actuator stem extends, PICV closes. • Pos. signal to Yu, Yi decreasing: Actuator stem retracts, PICV opens. • Pos. signal to Yu, Yi continuous: Actuator stem remains in the respective pos. |

Acting direction

Direct acting
Reverse acting

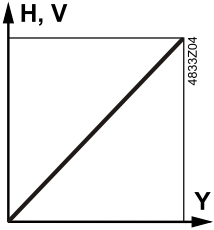
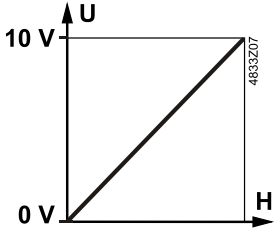
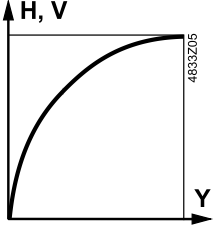
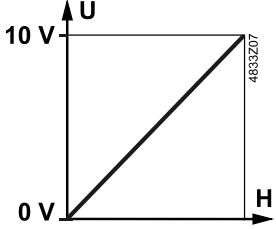
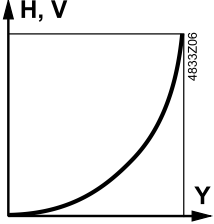
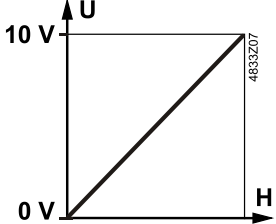
| Position signal | Operating voltage | Actuator stem | PICV |
|-------------------|------------------------------------|---------------|--------|
| Yu, Yi increasing | G1 to AC/DC 24 V L1 to AC 230 V | Retracts | Opens |
| Yu, Yi increasing | G2 to AC/DC 24 V L2 to AC 230 V | Extends | Closes |

Notes

- The input with the higher value has priority when a positioning signal is available at both Yu and Yi.
- When using the AC 230 V module ASP1.1, the SQV..P can also be operated with a DC 0...10 V or DC 4...20 mA positioning signal.
- The actuator travels to the applicable end position depending on the selected acting direction if Yu or Yi are interrupted:
 - Operating voltage to G1 or L1 Actuator stem extends.
 - Operating voltage to G2 or L2 Actuator stem retracts.
- Positioning times can be selected, see "Positioning times", page 7.
- Valve characteristic curves "lin" or "log" can be selected.
- Position feedback U is activated after initialization/calibration.
- Parallel operation with up to 5 actuators possible, see "Technical data", page 11.

Position feedback U

Position feedback U (DC 0...10 V) is always proportional to stroke H for the actuator. It is also active when using the AC 230 V module ASP1.1.

| DIL switch | Flow characteristics | Position feedback U |
|--|--|---|
| lin = linear ¹⁾ |  |  |
| log = equal percentage, $n_{gl} = 3$ (logarithmic normal) |  |  |
| log = equal percentage, $n_{gl} = 3$ (exponential normal) |  |  |

¹⁾ Factory setting

Fail-safe function

The actuator travels to the applicable end position (the stem retracts or extends depending on the model) using the preloaded spring if operating voltage to terminal G or 21 is lost or shut down. In this case, the actuator's control function is locked for 45 seconds (both LEDs are green) to reach the end position at any rate. There is no recalibration. The reset positioning speed ensures that no pressure surges occur in the piping.

| | | | |
|--------------|----------|-------------------------|-------------------------|
| End position | SQV91P30 | Actuator stem retracted | PICV opened (V = 100%). |
| | SQV91P40 | Actuator stem extended | PICV closed (V = 0%). |

Recalibration Recalibration can be manually triggered any time.

1. Operating voltage is supplied.
2. Engage and disengage the manual adjuster twice within 4 seconds.
3. Both LEDs flash green.
4. Recalibration is successful when both LEDs are lit green.
5. Return to normal control function.

- Notes
- Position feedback U is inactive or corresponds to value "0".
 - The shortest possible runtime is initialized.
 - Recalibration is valid only after the entire process is completed.
 - Additional engaging the manual adjuster interrupts the process.

Blockade detection The valve actuator indicates detected blockage by setting the feedback signal to 0 V after ca. 90 seconds. The actuator, however, tries to overcome the blockage during this period. Normal control function is reactivated if the blockage is overcome and position feedback U is once again available.

Response at the end positions Blockade detection is always operational. In other words, the actuator demonstrates the following response at end positions H₁₀₀ and H₀ not only during initialization and calibration, but also during normal control operation:

1. The actuator travels to the end position; the LED is lit in the direction of travel.
2. It detects the end position; both LEDs are lit green.
3. It then briefly travels in the opposite direction; the LED is lit in the direction of travel.
4. It then returns to the end position; LED is lit in the direction of travel
5. It detects the end position; both LEDs are lit green.

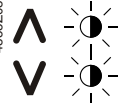
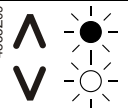
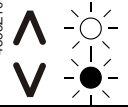
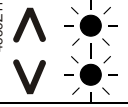
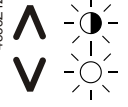
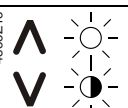
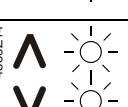
This response is repeated with time intervals between travels increasing exponentially. The intervals are:

25 seconds
1 min 40 seconds
6 min 40 seconds
26 min
1 h 46 min 40 seconds
7 h 6 min 40 seconds
1 day 4 h 26 min 40 seconds

for the previous interval.

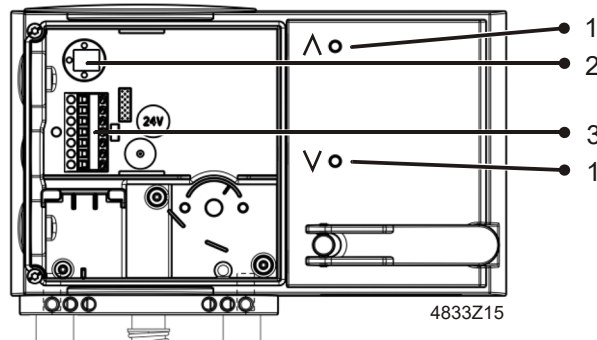
Status and acting direction indication (LED)

The status and acting direction indication consists of two green, lit LEDs.

| Indication | | Function |
|---|--|---|
| 4833Z08  | <ul style="list-style-type: none"> LED flashes green LED flashes green | <ul style="list-style-type: none"> Initialization. Manual mode. Delay after operating voltage is supplied, or the fail-safe function is triggered. |
| 4833Z09  | <ul style="list-style-type: none"> Steady green -- | Actuator stem retracts. |
| 4833Z10  | <ul style="list-style-type: none"> -- Steady green | Actuator stem extends. |
| 4833Z11  | <ul style="list-style-type: none"> Steady green Steady green | End position reached. |
| 4833Z12  | <ul style="list-style-type: none"> LED flashes green -- | Blockage or foreign object detected during retraction. |
| 4833Z13  | <ul style="list-style-type: none"> -- LED flashes green | Blockage or foreign object detected during extension. |
| 4833Z14  | <ul style="list-style-type: none"> -- -- | No operating voltage |



 

Frost protection thermostat

The actuators can be operated using a frost protection thermostat or temperature detector, see "Connection diagrams", page 12.



- 1 Status and acting direction indication (LED)
- 2 DIL switch
- 3 Connection terminals

DIL switch Positioning times

 
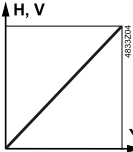
 
 
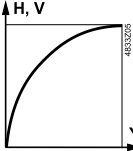
 
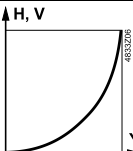
| DIL switch | Speed | Positioning time ¹⁾ | |
|---|------------|--------------------------------|----------------------|
| | | 20 mm | 40 mm |
|  | 2 sec/mm | 40 sec ²⁾ | 80 sec ²⁾ |
|  | 3 sec/mm | 60 sec | 120 sec |
|  | 4,5 sec/mm | 90 sec | 180 sec |
|  | 6 sec/mm | 120 sec | 240 sec |

¹⁾ Tolerance: ± 1 sec
²⁾ Factory setting

DIL switch

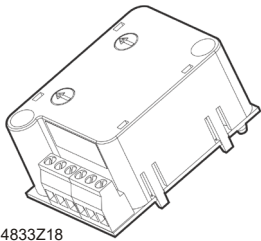
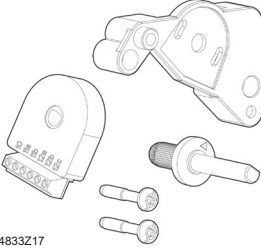

Flow characteristics

The flow characteristics can be used only for connections with constant positioning signals DC 0...10 V and DC 4...20 mA.

| DIL switch | Flow characteristics | |
|---|--|---|
|  | lin = linear ¹⁾ |  |
|   | log = equal percentage, $n_{gl} = 3$ (logarithmic normal) |  |
|  | log = equal percentage, $n_{gl} = 3$ (exponential normal) |  |

¹⁾ Factory setting

Accessories

| Type | ASC10.42 | ASZ7.6/1000 | ASP1.1 |
|--------------|--|---|--|
| Stock no. | S55845-Z137 | S55845-Z136 | S55845-Z138 |
| | Auxiliary switch pair | Potentiometer | AC 230 V module |
| |  4833Z18 |  4833Z17 |  4833Z16 |
| | Switching points can be continuously adjusted between 0 and 100% | 0...1000 Ω | AC 230 V to AC 24 V converter |
| Installation | Max. 1 | | Max. 1 |
| | Max. 2 | | |

See section "Technical data" (page 11) for more information.

Notes

Engineering

Install electrical connections in accordance with local regulations on electric installations as well as internal or connecting diagrams as of page 10.

Observe safety regulations and restrictions designed to ensure the safety of people and property at all times!

- An internal controller controls the actuator for 3-position or DC 4...20 mA positioning signal connection types, see "Connection diagrams", page 12.
- For DC 0...10 V connections (input impedance $R_i = 100\text{ k}\Omega$), up to 5 actuators can be controlled in parallel by a controller with a rating of 1 mA.
- The switching points must be entered on the plant diagram when using the double auxiliary switch ASC10.42.
- Do not insulate the actuator console and valve stem, as air circulation must be ensured.
- **Non-observance of the above may result in accidents and fires!**
- **Do not touch the hot parts without prior protective measures to avoid burns!**
- For permitted temperatures, see "Technical data", page 11.

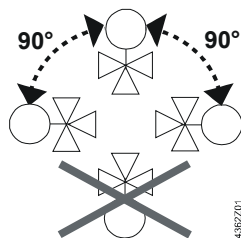


Mounting

Mounting instructions 74 319 0821 0 on mounting PICVs are included in the actuator's packaging. Mounting instructions for accessories are located in the respective packaging.

| Accessories | | Mounting instructions | |
|-------------|-------------|-----------------------|---------------|
| ASC10.42 | S55845-Z137 | M4833.1 | 74 319 0860 0 |
| ASZ7.6/1000 | S55845-Z136 | M4833.2 | 74 319 0861 0 |
| ASP1.1 | S55845-Z138 | M4833.3 | 74 319 0862 0 |

Mounting positions



Commissioning

- Check the wiring and carry out a functional check as part of commissioning.
- Make or check the settings as per the plant diagram for auxiliary switches and potentiometers.

Maintenance

The actuators are maintenance-free.

- Recommendation
- Regularly check functioning (trial) of actuators with safety functions.

When servicing the actuating device:

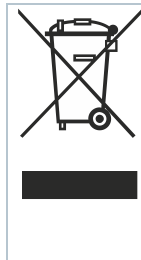
- Switch off both pump and operating voltage.
- Close the main shutoff valve in the piping.
- Release pressure in the pipes and allow them to cool down completely.
- Disconnect electrical connections from the terminals as needed.
- The actuator must be properly installed prior to recommissioning the valve.

- Recommendation
- Trigger stroke calibration after servicing.



- Repair
- There are no spare parts available; the entire actuator must be replaced.
 - **Removing the spring on the actuator is prohibited due to the high risk of injury.**

Disposal



The device is considered electrical and electronic equipment for disposal in terms of the applicable European Directive and may not be disposed of as domestic garbage.

- Dispose of the device through channels provided for this purpose.
- Comply with all local and currently applicable laws and regulations.

Warranty

The engineering data specified in section "Equipment combination" (page 3) are only guaranteed in connection with the Siemens valves listed.

Note

When using the actuators together with third-party valves, correct functioning must be ensured by the user, and Siemens will assume no responsibility.

Technical data

| | | SQV..P.. |
|---|---|--|
| Power supply | Operating voltage | AC 24 V ± 20% DC 24 V ± 15% |
| | With ASP1.1 AC 230 V module | AC 230 V ± 15% |
| | Frequency | 50...60 Hz |
| | Fusing ac. DIN 57100 part 430 (supply lines) | 6 A...10 A slow |
| | Power consumption With ASP1.1 AC 230 V module | 20 VA / 10 W 28 VA / 13 W |
| Function data | Positioning times 20 mm 40 mm | 40 1) / 60 / 90 / 180 sec 80 1) / 120 / 180 / 240 sec The positioning time depends on the DIL switch setting, "Positioning times" (page 7) |
| | Positioning force | 1100 N |
| | Nominal stroke | 20 mm / 40 mm / 43 mm |
| | Permissible medium temperature (valve fitted) | 1...120 °C |
| Signal inputs | Position signal Terminal G1, G2 Voltage | 3-position AC 24 V ± 20% DC 24 V ± 15% AC 230 V ± 15% |
| | Terminal Yu Voltage | DC 0...10 V |
| | Terminal Yi Input impedance | ≥100 kΩ |
| | Terminal Yi Power Input impedance | DC 4...20 mA 50 Ω |
| Fail-safe function ²⁾ | Terminal G / 21 SQV91P30 | Loss of operating voltage Actuator stem retracted, PICV fully open (100%). |
| | SQV91P40 | Loss of operating voltage Actuator stem extended, PICV fully closed (0%). |
| | Spring return time 20 mm 40 mm | 15 sec ³⁾ 30 sec ³⁾ |
| Position feedback | Position feedback U Load impedance Load | DC 0...10 V >2.5 kΩ res. Max. 4 mA |
| Connecting cable | Wire cross-sectional areas | 0.75...1.5 mm ² , AWG 20...16 ⁴⁾ |
| | Cable entry | 2 entry points M20 x 1. 1 entry points M16 x 1.5 |
| Degree of protection | Housing from vertical to horizontal | IP 66 as per EN 60529 |
| | Insulation class AC / DC 24 V With ASP1.1 AC 230 V module | As per EN 60730 III II |
| Environmental conditions | Operation Climatic conditions Mounting location Temperature General Humidity (non-condensing) | IEC 60721-3-3 Class 3K5 Indoors (weather-protected) 0...55 °C <95% r.h. |
| | Transport Climatic conditions Temperature Humidity | IEC 60721-3-2 Class 2K3 -30...70 °C <95% r.h. |
| | Storage Climatic conditions Temperature Humidity | IEC 60721-3-1 Class 1K3 -30...65 °C 5...95% r.h. |
| | Max. media temperature when mounted on PICV | 130 °C |
| Norms and directives | Electromagnetic compatibility (Application) | For residential, commercial and industrial environments |
| | Product standard | EN60730-x |
| | EU Conformity (CE) | CE1T4833xx01 ⁵⁾ |
| | RCM Conformity | CE1T4833xx02 ⁵⁾ |
| | UL Listed | UL 873 23BA, 23FR, E75924 Identical to the authorized Listee's model numbers – AVF234SF232U & AVF234SF132U |
| Environmental compatibility | The product environmental declaration CE1E4833en ⁵⁾ contains data on environmentally compatible product design and assessments (RoHS compliance, materials composition, packaging, environmental benefit, disposal). | |

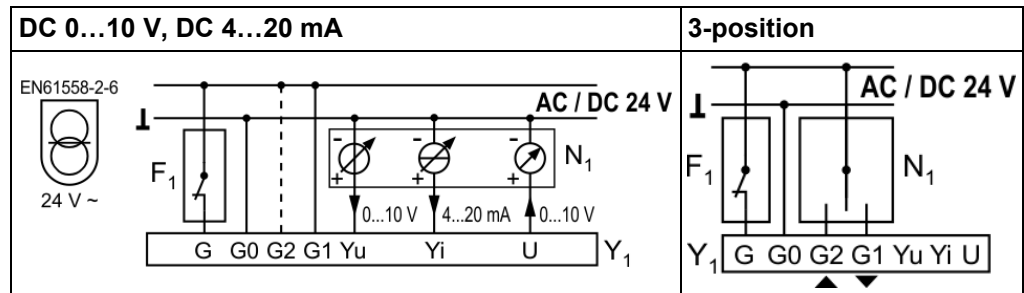
| | | SQV..P.. |
|--------------------|----------------------------------|---|
| Dimensions | See "Dimensions" (page 14) | |
| Accessories | Potentiometer ASZ7.6/1000 | 0...1000 Ω ± 20% |
| | Double auxiliary switch ASC10.42 | AC / DC 24 V < 1 W |
| | AC 230 V module ASP1.1 | AC/DC 12...AC 230 V, 6 A resistive, 2 A inductive |
| | Voltage Load | AC 230 V ± 5% |
| | Power consumption | 22 VA |

- 1) Factory setting
- 2) Control function is locked for 45 seconds.
- 3) At +23 °C ambient temperature and 1100 N nominal load
- 4) AWG = American wire gauge.
- 5) The documents can be downloaded from <http://siemens.com/bt/download>

Connection diagrams

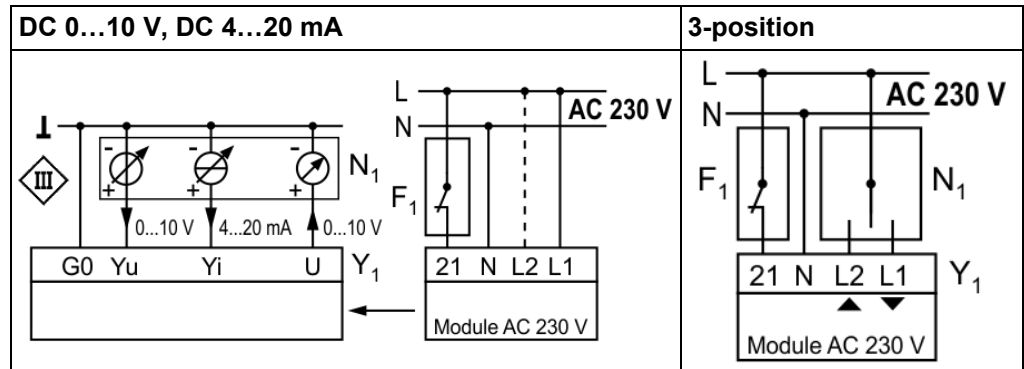
Connection diagrams

AC / DC 24 V



- Y1** actuator
N1 controller
F1 frost protection thermostat

AC 230 V



- Y1** actuator
N1 controller
F1 frost protection thermostat

Connection terminals

DC 0...10 V

DC 4...20 mA

AC / DC 24 V

| | |
|-----------|--|
| G | Fail-safe function (system potential) |
| G0 | System neutral |
| G2 | AC/DC 24 V, acting direction: Actuator stem extends as the positioning signal increases ¹⁾ |
| G1 | AC/DC 24 V, acting direction: Actuator stem retracts as the positioning signal increases ¹⁾ |
| Yu | Positioning signal DC 0...10 V |
| Yi | Positioning signal DC 4...20 mA |
| U | Position feedback DC 0...10 V |

with AC 230 V module ASP1.1

AC 230 V

| | |
|-----------|--|
| L1 | AC 230 V, acting direction: Actuator stem retracts as the positioning signal increases ¹⁾ |
| L2 | AC 230 V, acting direction: Actuator extends as the positioning signal increases ¹⁾ |
| N | Neutral |
| 21 | Fail-safe function (phase) |
| U | Position feedback DC 0...10 V |
| Yi | Positioning signal DC 4...20 mA |
| Yu | Positioning signal DC 0...10 V |

¹⁾ Connect either G1 or G₂; or L1 or L2. Refer to the description at "Positioning signals Yu and Yi", page 4 for additional details.

3-position

AC / DC 24 V

| | |
|-----------|--|
| G | Fail-safe function (system potential) |
| G0 | System neutral |
| G2 | AC/DC 24 V, acting direction: Actuator stem retracts, PICV fully open (100%) ¹⁾ |
| G1 | AC/DC 24 V, acting direction: Actuator stem extends, PICV fully closed (0%) ¹⁾ |
| Yu | Positioning signal DC 0...10 V (not used for the 3-position operation) |
| Yi | Positioning signal DC 4...20 mA (not used for 3-position operation) |
| U | Position feedback DC 0...10 V |

With AC 230 V module ASP1.1

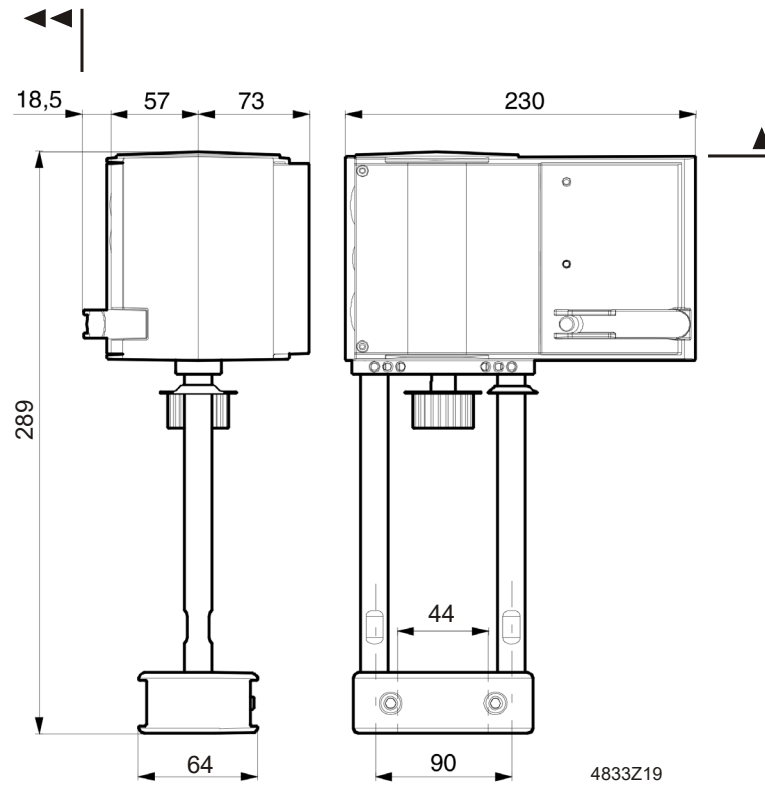
AC 230 V

| | |
|-----------|--|
| L1 | AC 230 V, acting direction: Actuator stem extends, PICV fully closed (0%) ¹⁾ |
| L2 | AC 230 V, acting direction, Actuator stem retracts, PICV fully open (100%) ¹⁾ |
| N | Neutral |
| 21 | Fail-safe function (phase) |
| U | Position feedback DC 0...10 V |
| Yi | Positioning signal DC 4...20 mA (not used for the 3-position operation) |
| Yu | Positioning signal DC 0...10 V (not used for 3-position operation) |

¹⁾ Refer to the description at "3-position control signal", page 4 for additional details.

Dimensions

All dimensions in mm



| | | |
|----|----------|---|
| ▶ | > 100 mm | Minimum mounting distance to wall or ceiling, for mounting, connection, operation, maintenance etc. |
| ▶▶ | >200 mm | |

Revision numbers

| Type | Revision number | Type | Revision number |
|----------|-----------------|----------|-----------------|
| SQV91P30 | A | SQV91P40 | A |

Issued by
 Siemens Switzerland Ltd
 Smart Infrastructure
 Global Headquarters
 Theilerstrasse 1a
 6300 Zug
 Switzerland
 Tel. +41 58-724 24 24
www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2011
 Technical specifications and availability subject to change without notice.