SIEMENS

ACVATIX™

2-port shutoff valves and 3-port changeover ball valves, PN 40, with internally threaded connection

VAI60.., VBI60..L, VBI60..T




For use in heating, ventilation, and air conditioning plants as shutoff or changeover ball valve. In closed circuits.

- Ball valve body made of brass, UNS C35330 (DZR)
- DN 15...50
- k_{vs} 5...96 m³/h
- Connections with internal threading Rp per ISO 7-1
- Rotational angle 90°
- Can be used with electromotorized rotary actuators GQD..9A, GMA..9E with spring return and GSD..9A, GDB..9E, GLB..9E without spring return
- For applications with auxiliary functions (e.g. auxiliary switchs, potentiometers, standard rotary actuators from the DAC product range can also be combined)

Features

- Moderately price:
 - Optimized flow rates mean smaller ball valves can be selected. Low torque means you can combine them with small, less expensive rotary actuators.
- Long life expectancy:
 - Maintenance-free construction, also thanks to low friction stem and polished ball made of chrome-plated DZR brass.
- Simple mounting:
 - The brackets, premounted on the actuators, means you can mount them on the ball valves without tools.

Technical design

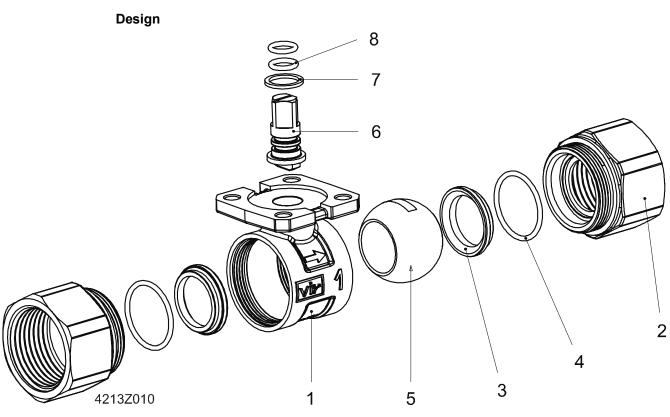


- 1 Housing
- 3 Seat
- 5 Marble
- 7 Slide clutch

- 2 Internally threaded connection
- 4 O-ring seal
- 6 Stem, squared
- 8 O-ring seal

Sizing

Flow diagram:

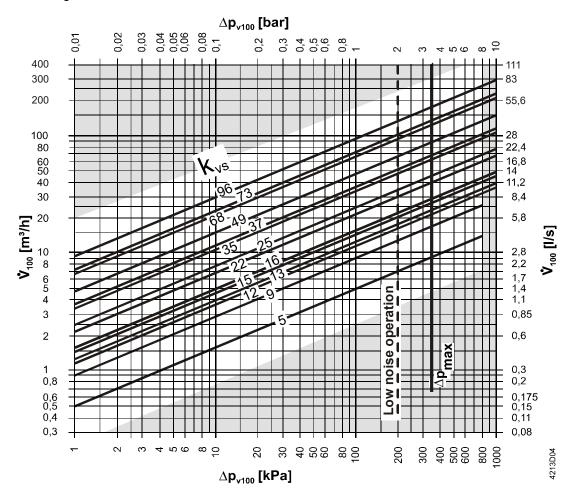

 -- Δp_{max} for VAI60.. and VBI60.., for details, see table on equipment combinations

 Δp_{max}

= Maximum permissible differential pressure over the ball valve, valid for the entire positioning range of the ball valve rotary actuator unit; if low noise operation is desired, we recommend a maximum permissible differential pressure of 200 kPa

 Δp_{v100}

= Differential pressure over the fully opened ball valve and over the control path at a volume flow V_{100}

¥ 100

Volume flow through the fully opened ball valve

100 kPa


= 1 bar ≈ 10 mWS

 $1 \text{ m}^3/\text{h}$


= 0.278 l/s water at 20 °C

Cavitation

Cavitation increases wear and tear of the ball and seat and results in unwanted noise. Cavitation can be prevented by not exceeding the differential pressures as per the flow diagram and maintaining the static pressures depicted below.

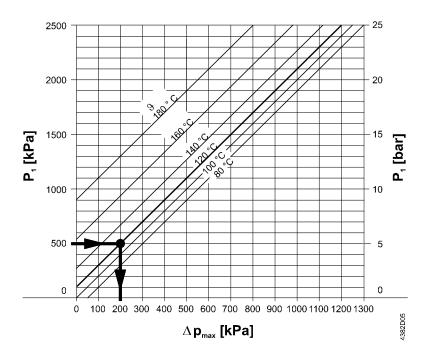

Δp_{max} = Differential pressure at a nearly closed ball valve to largely avoid cavitation



p₁ = Static pressure at the ball valve inlet

P₃ = Static pressure at the ball valve outlet

M Pump

J Water temperature

Example with hot water:

Pressure p₁ at ball valve inlet: 500 kPa (5 bar)

Water temperature: 120 °C


The above diagram clearly indicates that the maximum permissible differential pressure is $\Delta p_{max} \rightarrow 200 \text{ kPa}$ (2 bar) at a nearly closed ball valve.

Note on chilled water applications

To prevent cavitation in chilled water circuits, sufficient counter pressure must be supplied to the ball valve outlet, e.g. using an additional butterfly valve downstream of the ball valve. Maximum permissible differential pressure over the ball valve: See 80 °C curve in the above diagram.

Operating pressure and operating temperature

Liquids:

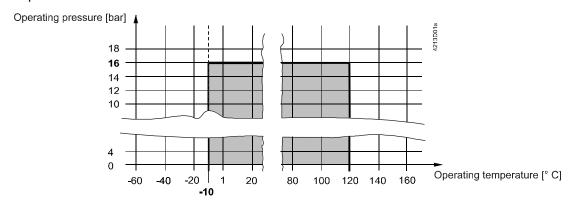

Operating pressure and medium temperature per ISO 7005 (Observe all local and applicable laws).

Type summary

			Туре			DN	k _{vs}
Shutoff ba	all valve 2-port	3-port chan	geover valve (L) 3-port change		geover valve (T)		[m ³ /h]
Product no.	Stock number	Product no.	Stock number	Product no.	Stock number		
_	_	VBI60.15-5L	BPZ:VBI60.15-5L	_	_		5
_	_	_	_	VBI60.15-12T	BPZ:VBI60.15-12T	15	12 ¹⁾
VAI60.15-15	BPZ:VAI60.15-15	_	_	_	_		15
_	_	VBI60.20-9L	BPZ:VBI60.20-9L	_	_		9
_	_	_	_	VBI60.20-16T	BPZ:VBI60.20-16T	20	16 ¹⁾
VAI60.20-22	BPZ:VAI60.20-22	_	_	_	_		22
_	_	VBI60.25-9L	BPZ:VBI60.25-9L	_	_		9
_	_	_	_	VBI60.25-16T	BPZ:VBI60.25-16T	25	16 ¹⁾
VAI60.25-22	BPZ:VAI60.25-22	_	_	_	_		22
_	_	VBI60.32-13L	BPZ:VBI60.32-13L	_	_		13
_	_	_	_	VBI60.32-25T	BPZ:VBI60.32-25T	32	25 ¹⁾
VAI60.32-35	BPZ:VAI60.32-35	_	_	_	_		35
_	_	VBI60.40-25L	BPZ:VBI60.40-25L	_	_		25
_	_	_	_	VBI60.40-49T	BPZ:VBI60.40-49T	40	49 ¹⁾
VAI60.40-68	BPZ:VAI60.40-68	_	_	_	_		68
_	_	VBI60.50-37L	BPZ:VBI60.50-37L	_	_		37
_	_	_	_	VBI60.50-73T	BPZ:VBI60.50-73T	50	73 ¹⁾
VAI60.50-96	BPZ:VAI60.50-96	_	_	_	_		96

 $^{^{1)}\,}k_{vs}$ Bypass B > 50 % of $k_{vs}\,A-AB$

DN = Nominal size

 k_{vs} = Flow nominal value for chilled water (5...30 °C) through a fully opened ball valve at a

differential pressure of 100 kPa (1 bar)

Temperature adapter ALJ100



▲ DANGER

Hazard to life caused by a lack of ground for the combination ALJ100 with G.. and ASK77.2!

Combining temperature adapter ALJ100 with ASK77.2 and rotary actuators G.. operated at AC 230 V \sim or AC 100...240 V \sim or rotary actuators G.. with auxiliary switch voltage AC 230 V \sim results in life-threatening shocks due to a lack of ground.

- Never combine rotary actuators G.. operated at voltage of AC 230 V ~ or AC 100...240 V ~ with temperature adapter ALJ100.
- Never combine ASK77.2 with temperature adapter ALJ100.
- Never combine rotary actuators with auxiliary switch voltage AC 230 V ~ with temperature adapter ALJ100.

Туре	Stock number	Description
ALJ100	S55846-Z115	Temperature adapter for ball valves

Filter

Installed upstream of the ball valve:

Туре	Stock number	Description	DN	Mesh width [mm]
ALX15	S55845-Z174	Filter with internal threading	15	0.5
ALX20	S55845-Z175	Filter with internal threading	20	0.8
ALX25	S55845-Z176	Filter with internal threading	25	0.8
ALX32	S55845-Z177	Filter with internal threading	32	0.8
ALX40	S55845-Z178	Filter with internal threading	40	0.8
ALX50	S55845-Z179	Filter with internal threading	50	0.8

Equipment combinations

Туре					Rotary a	ctuators											
	GSD)9A	GQE)9A	GDB	9E	GMA	9E	GLB	9E							
	Δp_{max}	Δps	Δp _{max}	Δps	Δp _{max}	Δps	Δp_{max}	Δps	Δp _{max}	Δps							
Ball valve					[kF	Pa]											
VAI60.15-15																	
VAI60.20-22	350	1400	350	1400	350	1400		1400		1400							
VAI60.25-22							050		050								
VAI60.32-35							350	1000	350	1000							
VAI60.40-68	-		-		-	-		800		800							
VAI60.50-96								600		600							
VBI60.15-5L																	
VBI60.20-9L	350		350		350												
VBI60.25-9L							350										
VBI60.32-13L							350										
VBI60.40-25L	-	-	-	-	-	-	-	-	-	-	-	-					
VBI60.50-37L								-	050	_							
VBI60.15-12T						-			350								
VBI60.20-16T	350		350		350												
VBI60.25-16T							050										
VBI60.32-25T							350										
VBI60.40-49T	-		_		_												
VBI60.50-73T																	

Δp_{max} = Maximum permissible differential pressure over the valve ball control path, valid for the entire positioning range of the ball valve rotary actuator unit; if low noise operation is desired, we recommend a differential pressure of 200 kPa

Δps = Maximum permissible differential pressure (closing pressure) at which the ball valve rotary actuator unit securely closes against the pressure

Overview of rotary actuators for ball valves

Type 1)		Operating			Spring return		Data sheet
Product no.	Stock number	voltage	Signal	Time	Function	Time	
GSD141.9A ²⁾	BPZ:GSD141.9A	AC/DC 24 V	Onen alega 3)	20.0			NACEE
GSD341.9A ²⁾	BPZ:GSD341.9A	AC 230 V	Open-close 3) 30 s	30 8	-	-	N4655
GQD121.9A ²⁾	BPZ:GQD121.9A	AC/DC 24 V		00/45 - 4)		15 s	N14050
GQD321.9A ²⁾	BPZ:GQD321.9A	AC 230 V	2-position	30/15 s ⁴⁾	Yes		N4659
GMA121.9E	BPZ:GMA121.9E	AC/DC 24 V		Yes 90/15 s ⁴⁾			
GMA321.9E	BPZ:GMA321.9E	AC 230 V				N4658	
GMA131.9E	BPZ:GMA131.9E	AC/DC 24 V	3-position				
GLB141.9E	S55499-D204	AC/DC 24 V	0 0				101/10000000
GLB341.9E	S55499-D205	AC 100240 V	2 or 3 point	450			A6V10636203
GDB141.9E ²⁾	S55499-D200	AC/DC 24 V	0 0	150 s	-	-	10)/10000150
GDB341.9E ²⁾	S55499-D201	AC 100240 V	2 or 3 point				A6V10636150

1) Actuator type: Electromotive

²⁾ Actuator only approved for medium temperature > 0 °C

³⁾ 2-wire SPDT (single pole double throw)

4) Open/close

Ordering

Please indicate material, article type, order text, and quantity; example:

Material	Article type	Order text	Quantity
VAI60.25-22	VAI60.25-22	Open/close ball valve internally threaded, 2-port	2
GLB131.9E	GLB131.9E	Actuator for ball valve, NSR	2

Delivery

Ball valves, rotary actuators, and mounting kits are not assembled and are delivered in individual packaging.

Applications with auxiliary functions

A standard actuator with corresponding functionality can be used if a ball valve application requires a rotary actuator with auxiliary functions (e.g. auxiliary switch or potentiometer). In this case, mounting kit ASK77.x is required in **addition** to the rotary actuator.

Follow the mounting instructions when mounting.

Rotary actuator	Options	Order text: Mounting kit
GMA1E (with spring return)		ASK77.2 Accessory Kit BV for GMA1.9E
GLB1E (without spring return)	Potentiometer, auxiliary switch Auxiliary switch	ASK77.3 Accessory Kit BV for GLB1.9E
GDB1E (without spring return)		ASK77.3 Accessory Kit BV for GDB1.9E
GQD1A (with spring return)		ASK77.5 Accessory Kit BV for GQD1.9A
GSD1A ¹⁾ (without spring return)		ASK77.5 Accessory Kit BV for GSD1.9A

¹⁾ GSDx4x.1A are not compatible with ball valves.

Product documentation

Title	Content	Document ID
Mounting instructions Ball valve VAI60 ,	Mounting instructions	M4213
VBI60L, VBI60T		(74 319 0883 0)
Rotary actuators for ball valves GSD41.9A	Data sheet: product description	N4655
Rotary actuators for ball valves GQD9A	Data sheet: product description	N4659
Rotary actuators for ball valves GMA9E	Data sheet: product description	N4658
Rotary actuators for ball valves GLB9E	Data sheet: product description	A6V10636203
Rotary actuators for ball valves GDB9E	Data sheet: product description	A6V10636150
Mounting instructions Mounting kit ASK77.2,	Mounting instructions	M4696
ASK77.3		(74 319 0648 0)
Mounting instructions Mounting kit ASK77.5	Mounting instructions	A6V11171911
		(A5W00032790)

Related documents such as environmental declarations, CE declarations, etc., can be downloaded at the following Internet address:

http://siemens.com/bt/download

Safety



▲ DANGER

There is a risk to operating personnel and device when working on the unit

Failure to comply with these safety notes can result in personal injury and damage to property from pipe pressure, electrical voltage, or device in operation.

- Note the following when servicing a ball valve/rotary actuator:
- Switch off both pump and operating voltage.
- · Close shutoff valves.
- Release pressure in the pipes and allow them to cool down completely.
- Disconnect electrical connections from the terminals as needed.
- The rotary actuator must be properly installed prior to recommissioning the ball valve.



A

CAUTION

National safety regulations

Failure to comply with national safety regulations may result in personal injury and property damage.

• Observe national provisions and comply with the appropriate safety regulations.


Engineering

We recommend installing the ball valve with spring return since temperatures are lower on heating plants which increases the lifespan of the sealing gland on the stem.

Ensure there is no cavitation (see Section Technical design $[\rightarrow 2]$).

A filter must be installed upstream of the ball valve to increase functional safety.

We recommend using temperature adapter ALJ100 in locations exposed to condensation to protect the actuator. Lubricate the adapter axle with silicon grease at medium temperatures \leq 0 °C.

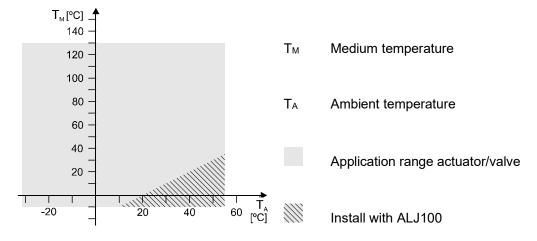

Only use GDB.., GDD..,GSD.. and GQD.. actuators at medium temperatures > 0 °C.

Permissible media

Using the ball valve together with potassium formate-based media can result in leakage over the stem to the outside. The reason is the high level of penetration at low surface tension of media based on potassium formate.


Siemens rejects any and all liability for damages or consequential damages resulting from the use of this media together with our ball valves.

Mounting

It is easy to assemble the ball valve and rotary actuator; it can be done at the construction site. No special tools or settings required.

Ball valve VAI60.. / VBI60.. is supplied together with mounting instructions M4213 (74°319°0883°0).

Mounting position

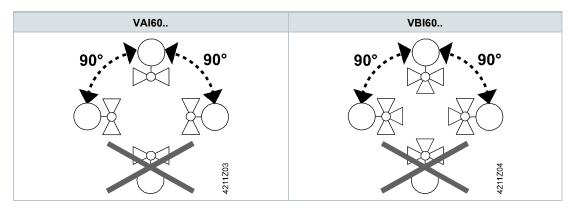


Pipe connection


Avoid leakage:

- Install fittings as per ISO 7-1. Ball valves (internal threading) = "Rp";
 Piping (external threading) = "R".
- Do not use too much hemp or PTFE tape.
- Do not tighten pipe threading to the very end.
- Place the pliers/wrench on the ball valve union nut that is closer to the pipe to be tightened or loosened.

Flow direction

Make sure that the valve is mounted in the proper flow direction. A symbol is applied to the ball valve body:



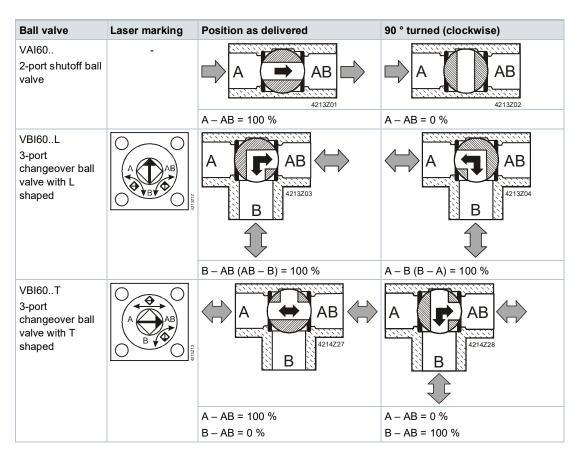

Maintenance

Ball valves VAI60.. and VBI60.. are maintenance free.

Disposal

Do not dispose of the device as part of domestic waste.

- Special handling of individual components may be required by law or make ecological sense.
- Adhere to all local and currently applicable laws and regulations.

Warranty

Technical data on specific applications are valid only together with Siemens products listed under "Equipment combinations". Siemens rejects any and all warranties in the event that third-party products are used.

Functional data						
	VAI60	VBI60L	VBI60T			
PN class	PN 40 per ISO 7268	PN 40 per ISO 7268				
Operating pressure	Per ISO 7005 within the per design [→ 2]	Per ISO 7005 within the permissible media temperature as per Section Technical design [→ 2]				
Leakage through-port	Water proof per EN 60534-4 L/1, improved class 5	-	Water proof per EN 60534- 4 L/1, improved class 4			
Leakage A (Flow B-AB) Leakage AB (Flow A-B)	-	Water proof per EN 60534- 4 L/1, improved class 4	-			
Leagage bypass	-	-	< 1 %			
Permissible media		Chilled water, low temperature hot water, hot water, water with antifreeze. Recommendation: Water treatment per VDI 2035 Note: Page 10				
Medium temperature	-10120 °C ¹⁾	-10120 °C ¹⁾				
Rangeability Sv	> 500	> 500				
Rotational angle	90 °	90 °				

Materials	
Ball valve body	Dezincification-resistant hot-pressed brass (DZR 2), CW602N
Marble	Dezincification-resistant hot-pressed brass (DZR ²⁾), CW602N, chrome plated
Stem	Dezincification-resistant hot-pressed brass (DZR 2), CW602N
Sealing gland	EPDM-O rings

Dimensions / Weight	
See Dimensions [→ 13]	
Internally threaded connection	Rp per ISO 7-1

Standards, directives and approvals			
Pressure Equipment Directive	DGR 2014/68/EU		
Pressure accessories Fluid group 2	Range: Article 1, para. 1 Definition: Article 2, para. 5 Without CE certification as per article 3, para. 3 (generally applicable engineering practice) 3)		
EAC compliance	Eurasian compliance		
Environmental compatibility	Environmental Declaration E1E4213en ⁴⁾ contains data on environmental-compatible product design and assessment (RoHS compliance, compositions, packaging, environmental benefits and disposal).		


¹⁾ Only GLB.., GLD.. and GMA.. actuators are approved for medium temperatures ≤ 0 °C.

²⁾ Dezincification resistant

Fittings for a product where PS x DN < 1000, do not require special testing and cannot have CE labeling

⁴⁾ Related documents such as environmental declarations, CE declarations, etc., can be downloaded at the following Internet address: http://siemens.com/bt/download

VAI60..

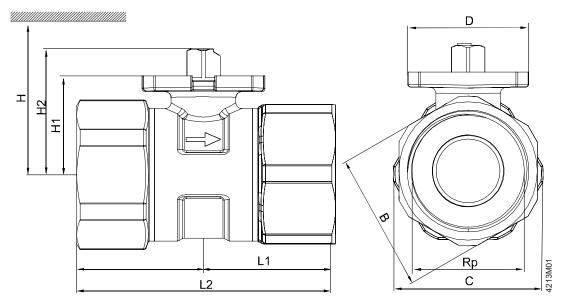

DN = Nominal size

H = Total height of actuator plus minimum mounting distance to wall or ceiling, for mounting, connection, operation, maintenance, etc.


H1 = Dimension from the pipe to the center to install actuator (upper edge)

Туре	DN	В	С	D	Rp	L1	L2	H1	H2	
			[mm]		[inch]	[mm]				
VAI60.15-15	15	26	31 ¹⁾	42	Rp ⅓	30.8	61.6	27.6	37.6	
VAI60.20-22	20	31	38	42	Rp ¾	33,5	67	30.5	40.5	
VAI60.25-22	25	39	42.5	42	Rp 1	38.4	76.8	30.5	40.5	
VAI60.32-35	32	48	52	42	Rp 11/4	44	88	34.3	44.3	
VAI60.40-68	40	55	61	42	Rp 1½	50.9	101.8	39.8	49.8	
VAI60.50-96	50	67	74	42	Rp 2	58.1	116.2	52.8	62.8	

¹⁾ Ball valve body extends above threaded connection

Туре		н								
	GSD9A	GQD9A	GDB9E	GMA9E	GLB9E					
		[mm]								
VAI60.15-15	> 200	> 300 > 300 > 3	> 200	> 200	0.28					
VAI60.20-22	> 300		> 300	> 300	> 300	0.36				
VAI60.25-22	> 320	> 320	> 320			0.46				
VAI60.32-35				> 320	> 320	0.7				
VAI60.40-68	-	-	-			1.1				
VAI60.50-96				> 335	> 335	1.74				

VBI60..L / VBI60..T

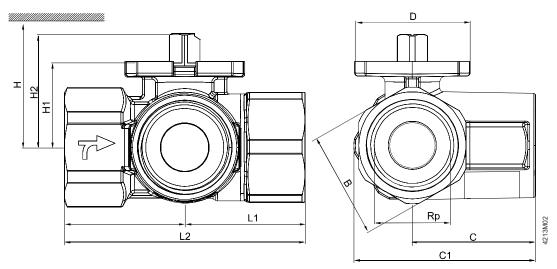

DN = Nominal size


H = Total height of actuator plus minimum mounting distance to wall or ceiling, for mounting, connection, operation, maintenance, etc.

H1 = Dimension from the pipe to the center to install actuator (upper edge)


Туре	DN	В	С	C1	D	Rp	L1	L2	H1	H2
		[mm]			[inch]	[mm]				
VBI60.15-5L	15	26	34	49.5	42	Rp ⅓	33.3	66.6	27.6	37.6
VBI60.20-9L	20	39	39.8	61.05	42	Rp ¾	40.2	80.4	30.5	40.5
VBI60.25-9L	25	39	44.8	66.5	42	Rp 1	42.7	85.4	30.5	40.5
VBI60.32-13L	32	48	52.6	78.6	42	Rp 1⅓	49.6	99.2	34.3	44.3
VBI60.40-25L	40	55	57.1	87.6	42	Rp 1½	54.8	109.6	39.8	49.8
VBI60.50-37L	50	67	68.9	105.9	42	Rp 2	65.7	131.4	52.8	62.8
VBI60.15-12T	15	26	34	49.5	42	Rp ⅓	33.3	66.6	27.6	37.6
VBI60.20-16T	20	39	39.8	61.05	42	Rp ¾	40.2	80.4	30.5	40.5
VBI60.25-16T	25	39	44.8	66.5	42	Rp 1	42.7	85.4	30.5	40.5
VBI60.32-25T	32	48	52.6	78.6	42	Rp 1¼	49.6	99.2	34.3	44.3
VBI60.40-49T	40	55	57.1	87.6	42	Rp 1½	54.8	109.6	39.8	49.8
VBI60.50-73T	50	67	68.9	105.9	42	Rp 2	65.7	131.4	52.8	62.8

Туре		Weight				
	GSD9A	GQD9A	GDB9E	GMA9E	GLB9E	
		[kg]				
VBI60.15-5L	> 300	> 300	. 000	> 300	> 300	0.32
VBI60.20-9L	> 300	> 300	> 300			0.73
VBI60.25-9L	> 320	> 320	> 320		> 320 > 320	0.62
VBI60.32-13L	-	-	-	> 320		0.97
VBI60.40-25L						1.43
VBI60.50-37L				> 335	> 335	2.36
VBI60.15-12T	> 200	> 200	> 200	> 300	> 300	0.31
VBI60.20-16T	> 300	> 300	> 300			0.74
VBI60.25-16T	> 320	> 320	> 320	> 320	> 320	0.63
VBI60.32-25T	-		-			0.69
VBI60.40-49T						1.38
VBI60.50-73T				> 335	> 335	2.26

Temperature adapter (optional)

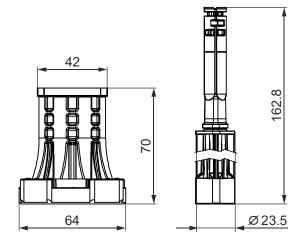

Filter

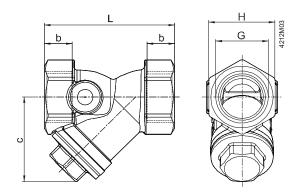

Туре	DN	b	С	G	L	L H		Weight
		mm		Inch 1)	mm			kg
ALX15	15	12	38	G ½	54	27	3.5	0.178
ALX20	20	15	43	G ¾	67	34	5.8	0.290
ALX25	25	16	53	G 1	79	41	9.1	0.410
ALX32	31	17	64	G 1¼	98	51	19	0.680
ALX40	40	18	70	G 1½	106	57	24	0.874
ALX50	50	20	85	G 2	122	69	36	1.428

¹⁾ ISO 228-1

Revision numbers

Туре	Valid from	Туре	Valid from	Туре	Valid from rev. no.	
Shutoff ball valve VAI60	rev. no.	Changeover ball valve VBI60L	rev. no.	Changeover ball valve VBI60T		
2-port		3-port		3-port		
VAI60.15-15	A	VBI60.15-5L	A	VBI60.15-12T	A	
VAI60.20-22	A	VBI60.20-9L	A	VBI60.20-16T	A	
VAI60.25-22	A	VBI60.25-9L	A	VBI60.25-16T	A	
VAI60.32-35	A	VBI60.32-13L	A	VBI60.32-25T	A	
VAI60.40-68	A	VBI60.40-25L	A	VBI60.40-49T	A	
VAI60.50-96	A	VBI60.50-37L	A	VBI60.50-73T	A	

Issued by
Siemens Switzerland Ltd
Smart Infrastructure
Global Headquarters
Theilerstrasse 1a
CH-6300 Zug
Tel. +41 58-724 24 24
www.siemens.com/buildingtechnologies

© Siemens Switzerland Ltd, 2021 Technical specifications and availability subject to change without notice.

Document ID CE1N4213en Edition 2021-08-25